<u>Dear Custome</u>r


IMPORTANT CABINET LOCATION

Very important Please Note:

Your new cabinet has an Infra-red sensor on the bottom right hand side of the rear carcass.

There needs to be at least a 15cm gap between the head of the sensor and the nearest obstacle, a wall for example.

If the gap is less than 15cm then your sensor will not work properly!

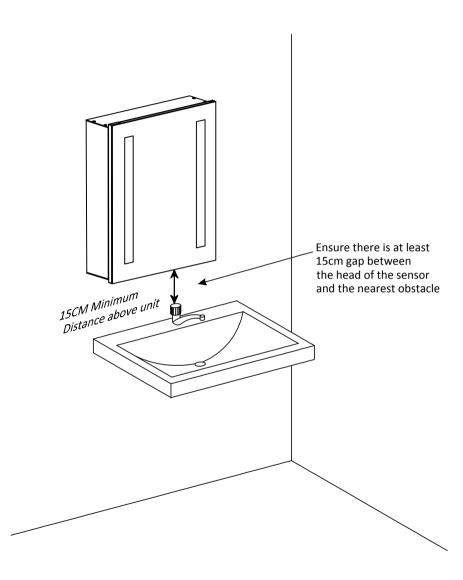



Line drawing 600mm 143mm Cable Outlet slot for the cable slot for the cable


Model No.	A (mm)	B (mm)	C (mm)	D (mm)	E (mm)
A. 140/B. 140/C. 140	1400	700	660	260	130
A. 160/B. 160/C. 160	1600	700	740	260	130


Page 2

INSTALLATION INSTRUCTIONS

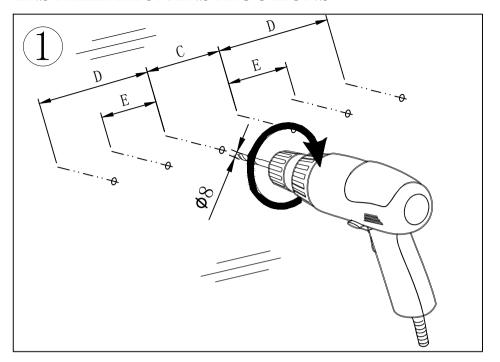


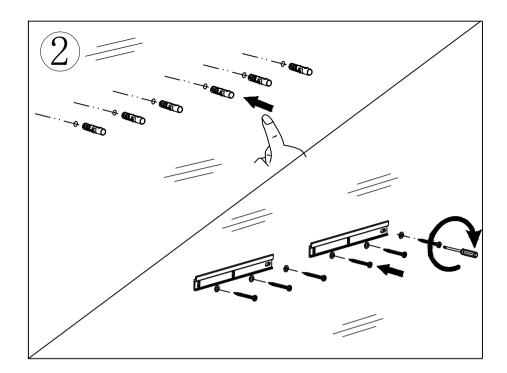


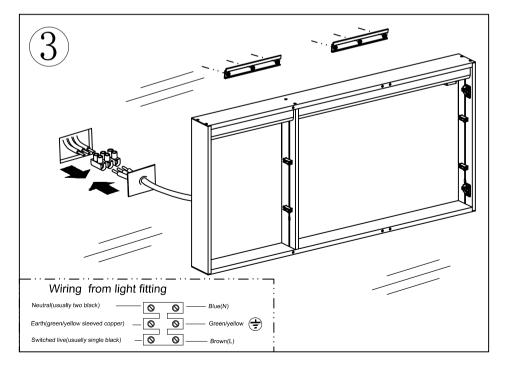


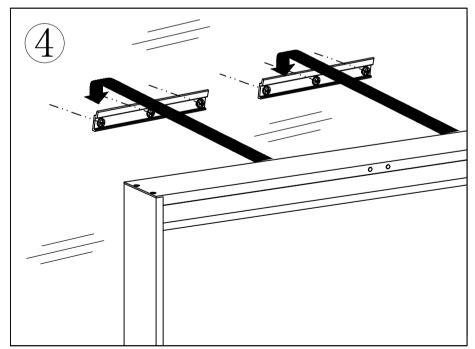


Page 3

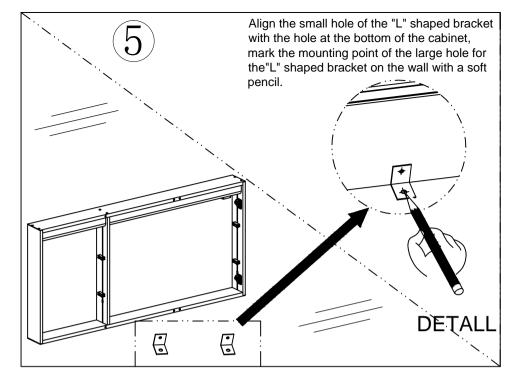

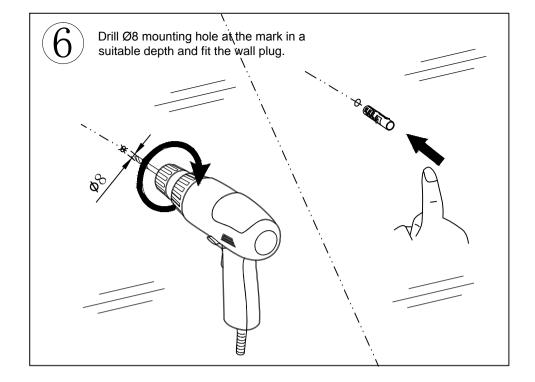


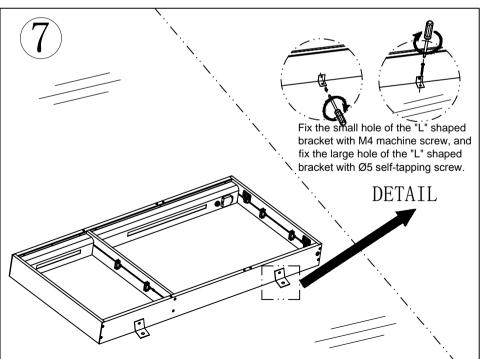

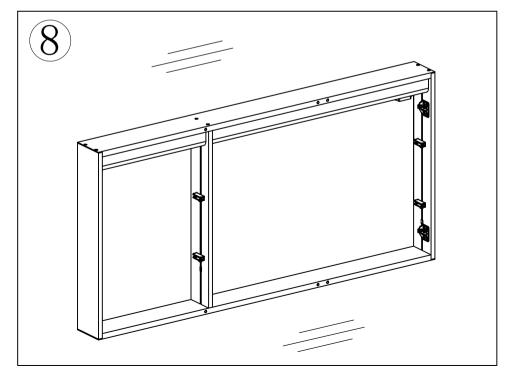


Page 4


FIXING INSTRUCTIONS FOR THE ADJUSTABLE GLASS SHELVES

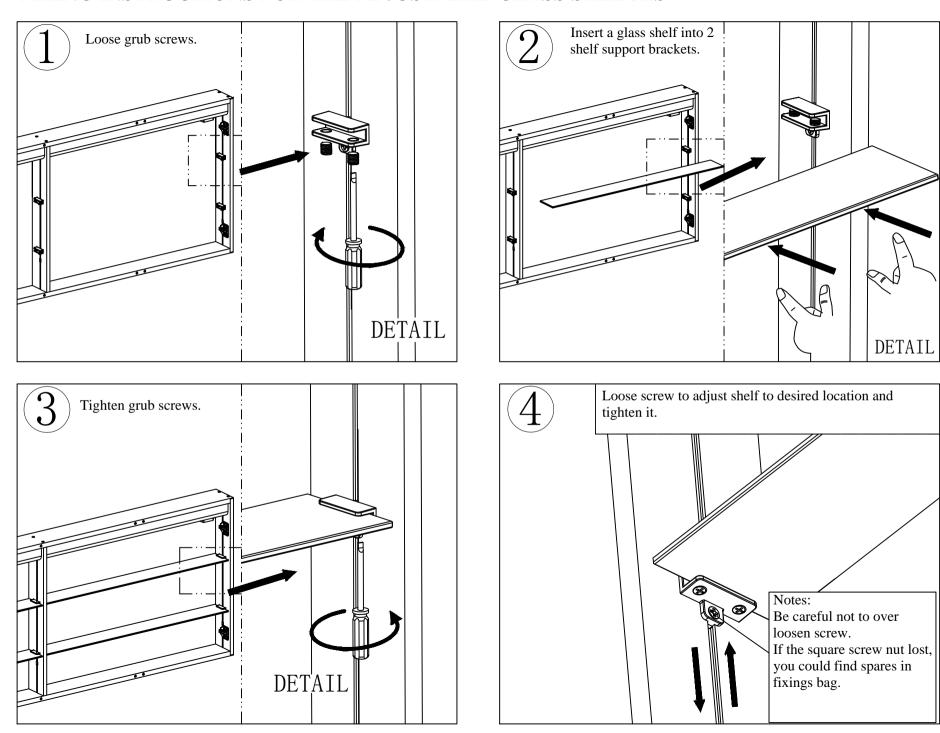

Page 5

FIXING INSTRUCTIONS FOR THE MIRROR DOOR (STRONGLY ADVICE TO INSTALL EACH DOOR WITH 2 PERSONS)

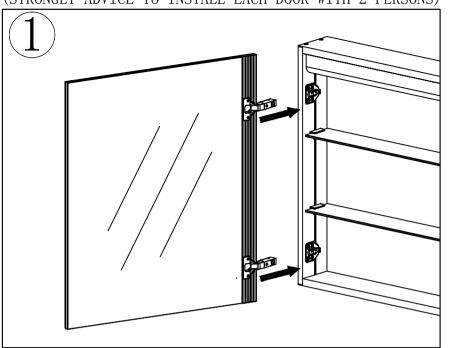


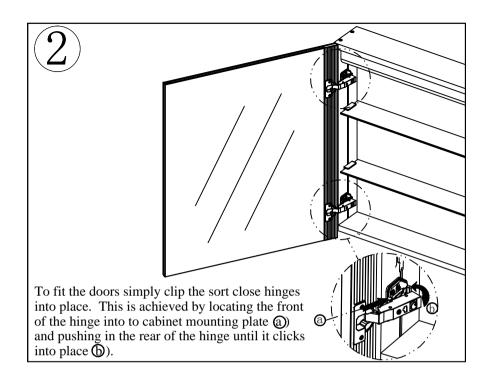


3) Door Adjustment


There are two adjustments that can be made (a)) will adjust the door left to right (b)) will adjust the gap between the door and the cabinet.


Once you have correctly adjusted the door(s) simply clip on the hinge cover (C)

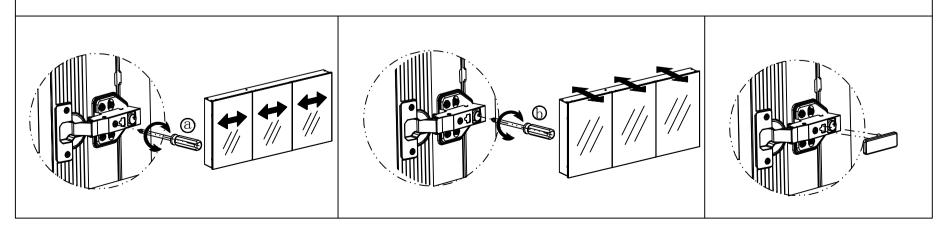

MAGNETIC STRIP INSTALLATION INSTRUCTION

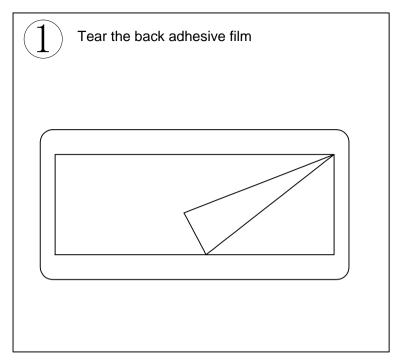

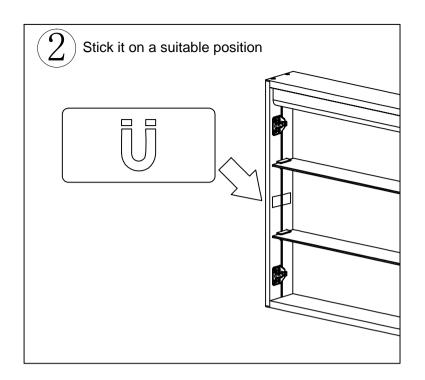

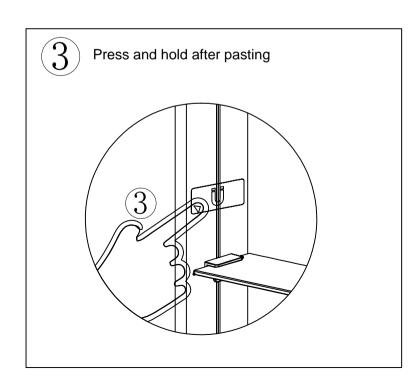

CAUTION: We recommend that you make sure the rear cable is not kinked or overlapped after installation to avoid potentially cracking the internal mirror.

